
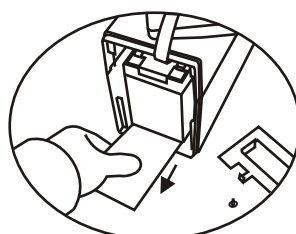
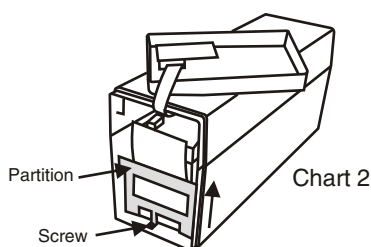


# Instructions for Battery Replacement

## Models: SBP0400TBF, SBP0600TBF, SBP0800TBF, SBP1000TBF

### 10. Battery Removal (SBP400-800)



Before replacing the battery, turn off the UPS and unplug the UPS cord from the wall outlet. Follow Chart 1 to remove the screw located on the bottom of the front panel and then open the front cover.

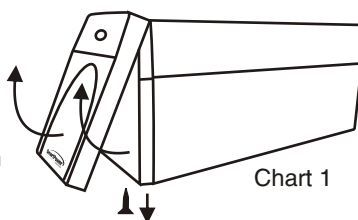

After removing the front cover, follow Chart 2 to remove partition by removing the screw. Then follow Chart 3 to pull out battery by pulling attached white vinyl sheet. Disconnect the wires connected to the battery. Be sure to replace the same type of batteries and dispose of old batteries properly at an appropriate recycling facility.

### 10. Battery Removal (SBP1000)

Before replacing the battery, turn off the UPS and unplug the UPS cord from the wall outlet. Follow Chart 4 to remove the screw located on the bottom of the front panel and then open the front cover.

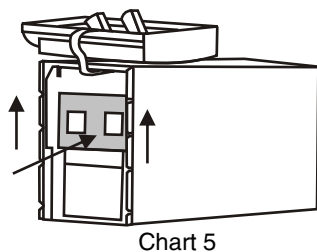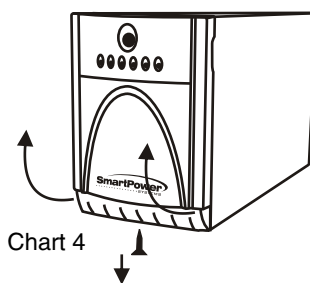

After removing battery cover (Chart 5), gently extract the battery by pulling attached white vinyl sheet (Chart 6). Disconnect the wires connected to the battery. Be sure to replace the same type of batteries and dispose of old batteries properly at an appropriate recycling facility.

